

# Levitation wireless Speaker Operating Instructions

Congratulations for purchasing the Levitation Antigravity Speaker! This latest advancement in magnetic levitation incorporates a sophisticated patented technology which balances nature's two main forces – Gravity which pushes down and Magnetism which pushes up.

## How to Levitate Your wireless Speaker

Balance can be achieved once the speaker is gently placed at a singular location in mid-air. Finding the exact levitation point requires practice and patience. The first time you are successfully levitating your speaker, you will feel a sense of exhilaration over your accomplishment. Each time after your initial success, you will find that the feat becomes easier until eventually you will become a master of levitation. Please be assured that every Levitation device has been tested to work properly before leaving the factory. So, please be patient and follow the detailed guideline provided below:

 
### Get comfortable

Sit comfortably on a stable (non-rocking) chair at your dining table or any other table of similar height). Place the magnetic base on the table right in front of you, and then plug it in.

### To Find the Balance Point

The magnetic balance point is located at the center of the base. The exact position is determined as follows:

- Hold the speaker gently in both hands with thumbs and index fingers at a height of about a foot above the base surface and then lower the magnet to the magnetic balance point which you will find to be at approximately a height of 5mm to 12mm above the base. You will know when you have approximately reached this point because the speaker will feel almost balanced in mid-air – not falling down and not being pushed up.
- Once you feel that you have reached the balance point you can begin to gently release your hold of the lower part of the speaker. If it floats – Congratulations! If it falls – simply start over.

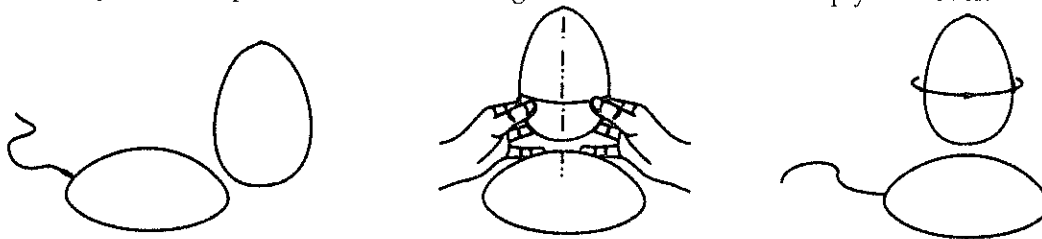


The Levitation wireless Speaker is the product of advances in electromagnetic engineering. Because of this, the techniques involved in operation are new to most people. Practice may be needed when learning how to properly operate this device. Do not become discouraged if you cannot achieve levitation after a few tries. With practice, you will become a master.

**IMPORTANT! The electromagnetic field sensor inside your Levitation base is designed to automatically turn off power to the unit under certain conditions such as overheating in order to prevent damage to the circuitry and ensure long product life. So, if after a few tries, you have not successfully levitated the speaker please wait thirty minutes or more before your next attempt**
 
### **CAUTIONS**

- Make sure unit is installed on a flat surface
- Keep away from any steel objects or any other electronic items
- People with pacemakers should not come into contact with the device
- **THIS IS NOT A TOY AND IT IS NOT SUITABLE FOR THE CHILDREN UNDER 12 YEARS OLD.**
- **DO NOT OPEN THE BASE, AND DO NOT DISASSEMBLE THE COMPONENTS.**

## OPERATION INSTRUCTIONS FOR USE WIRELESS SPEAKER

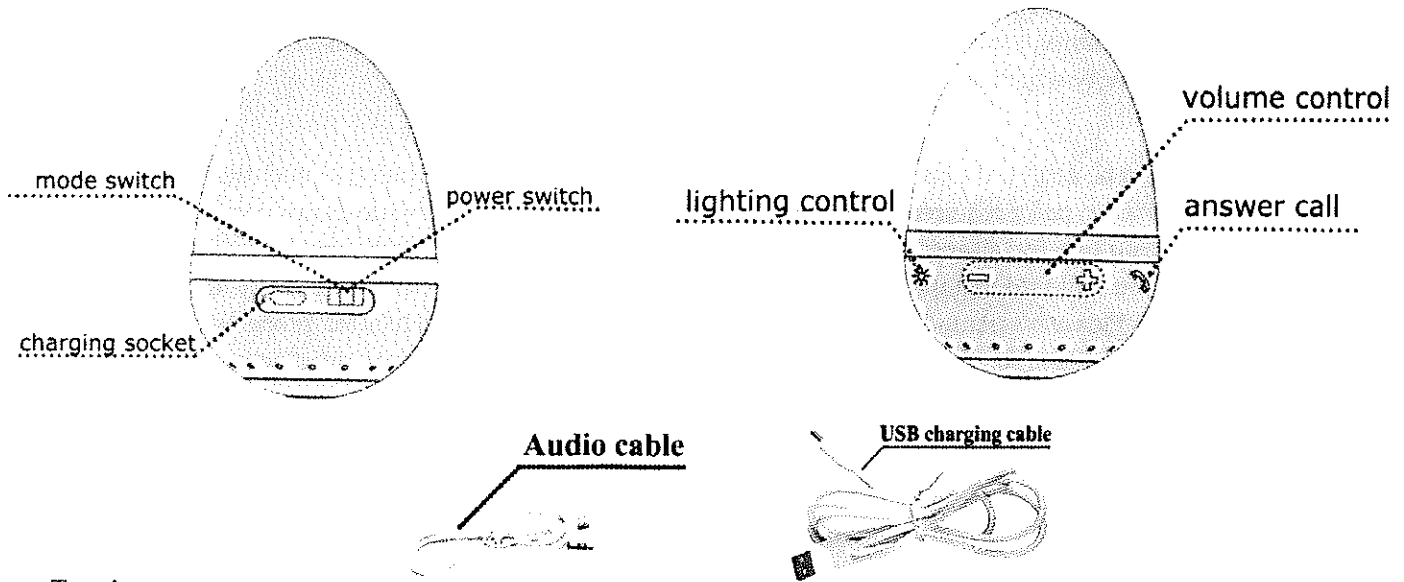

### **Turning on :**

Turn the power switch to the left in order to turn on the wireless player with warning tones.

Turn the power switch to the right in order to turn on the wire player with warning tones.

Turn the power switch in the middle to turn off the whole speaker.

### **Wireless Pairing mobile phone:**

Please connect the speaker with your smart phone, and search for and pair the "music vitamin" or "SL-S21BTC". Please input the password "0000"(if no password requirement, you can ensure the pairing directly) .

select your songs.

### **Pairing mobile phone:**

Please turn the power switch to the right with an warning tone.

Please use a micro-3.5mm Audio cable to connect the speaker with your phone.

Please select your songs.

### **Wireless Power charge**

Red warning light is on when it is wireless charging and flying in the mid air.

20 hours charging time.

### **Wire power charge**

connect a standard 3.5mm USB cable inside the packing with an 5V mobile charger.

Red warning light when it is charging

4 hours charging time

### **Wireless call:**

Turn the power switch to the left and pair your phone with speaker.

If there is a calling, people will hear a warning tone for it, and please press the model of answer call shortly to answer the calling. Please press the model of answer call longstanding to reject the calling.

### **lighting control :**

Turn on the speaker ,and there will be a RGB changing colored lighting effect.

Press the model of lighting control in 3-5 seconds and there will be one color lighting effect.

### **Volume and Songs control:**

Press " + " or " - " shortly to change different songs.

 
press " + " or " - " for long time to increase or decrease the volume .




# Operating Instructions

## Magnetic Levitation wireless Speaker Assistance Tool


For people who find it difficult to levitate the magnetic egg like wireless speaker, find enclosed our helpful levitation tool set shown to the right next to the levitation base.

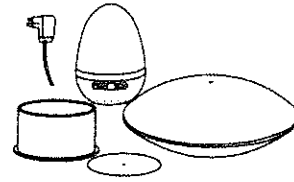

 
To use, first place the nub located in the center of the clear plastic disc down into the hole located in the center of the UFO shaped dome base. Then slide the plastic hollow tube down around the disc.

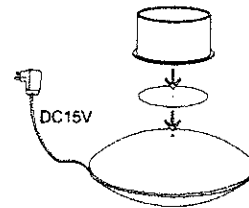

 With one hand hold the hollow tube in place use the other hand to gently take the magnetic egg like speaker as shown in the diagram and drop it into the hollow column. If done successfully, the speaker will be floating inside the column. If it is not floating but resting against the vertical sides then try again.

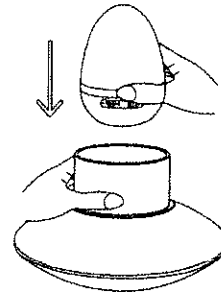

 Once you have the speaker levitating inside the column, lift the column gently without touching the speaker and voila, you have mastered levitation.

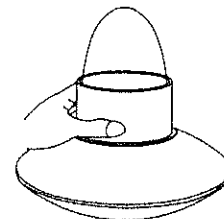

Now you can enjoy your music with 360 degree sound quality.

